


Note! Same for the tuner, select your station and volume level.


preset will take a snapshot of the current

Note! Presets are not dedicated to the tuner. The presets are for any of the line input sources as well as the tuner.

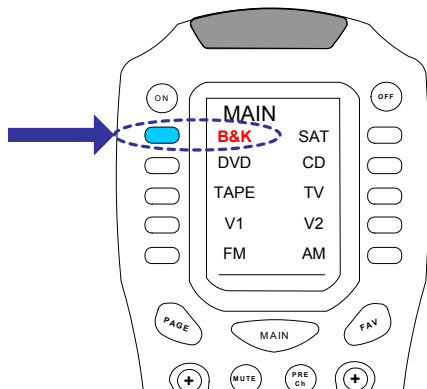

Step 1

Select the B & K Device Buttons from the Main Page. The Remote will view Page 1 of B&K.

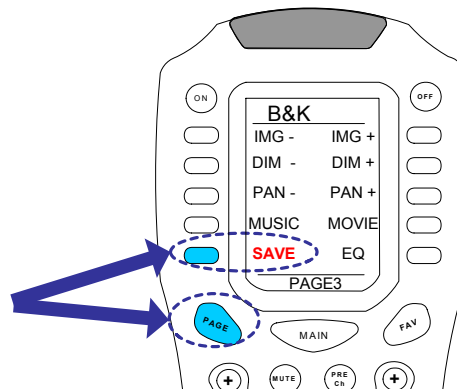

Step 2

Click the Page Button to go to Page 3 of B&K. Locate the SAVE button on the LCD of the remote. It will be located on the bottom left corner of the LCD.

Step 3

To save the current setting to the preset (using preset 1 as an example). Select SAVE, then the number ONE, and the ENT. The current settings are now saved.

Step 4

To recall preset one. Select the number ONE and then ENT.

