



## Installation and Operating Instructions for B&K HTTP Flash File Download Application, version 1.0.3:


1. Install the B&K HTTP Flash File Download Application onto your PC.
2. Connect an Ethernet Crossover cable from the network (LAN) port of your PC to the Ethernet port of the B&K device.
3. In the control panel of you PC, select “Network Connections”, “Local Area Connections”. Next, select “Internet Protocol (TCP/IP)”, and click “properties”.
4. In the internet properties window, click on “Use the following IP address”. Enter the IP address- 192.168.1.100 , and enter the Subnet mask- 255.255.255.0 . Click OK in this window, and the window under it. You have now setup your PC to communicate with the B&K device. Note: To re-establish an internet or local network connection, go back to this screen and select “Obtain an IP address automatically”. Close the three windows.

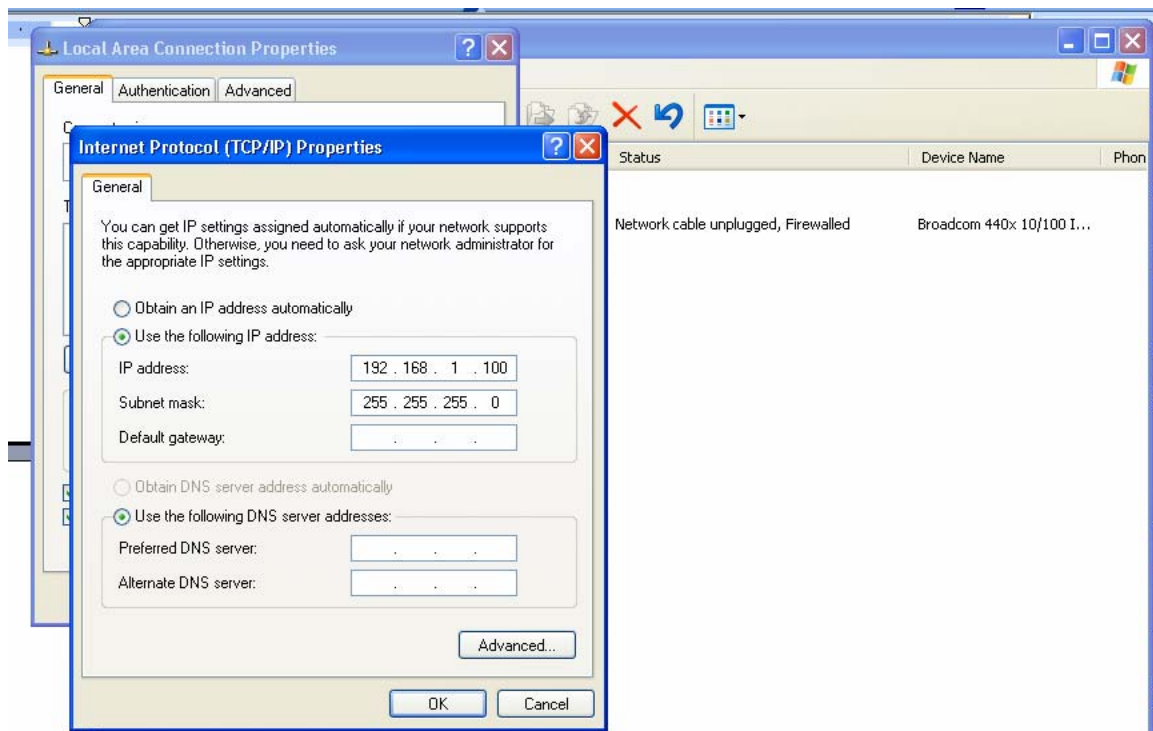


5. Open the B&K HTTP Flash File Download Application. Click on “Start Communication, and follow the prompts on the screen. This application only uses the “Direct Connection (PC to B&K Device)” connection type.

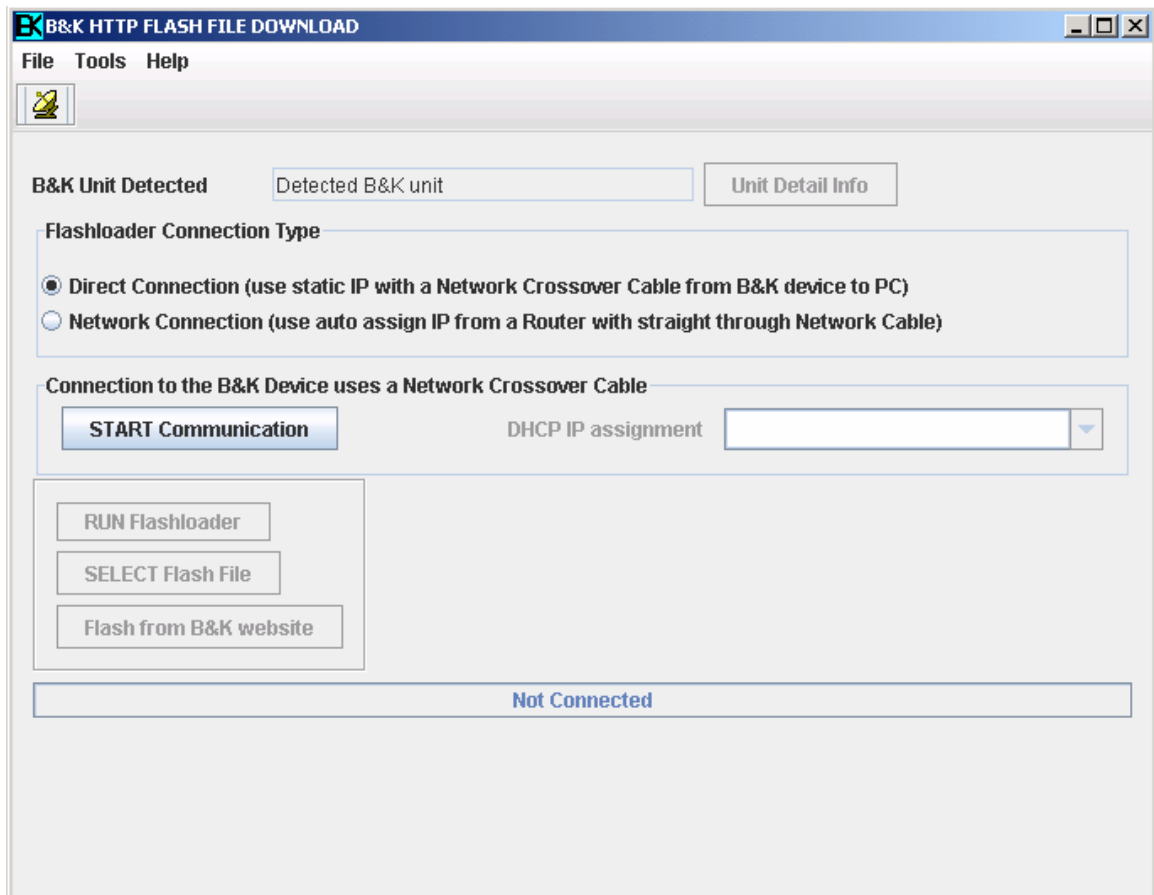


6. After following the screen prompts, the application will begin to acquire B&K device information. This may take up to 45 seconds.

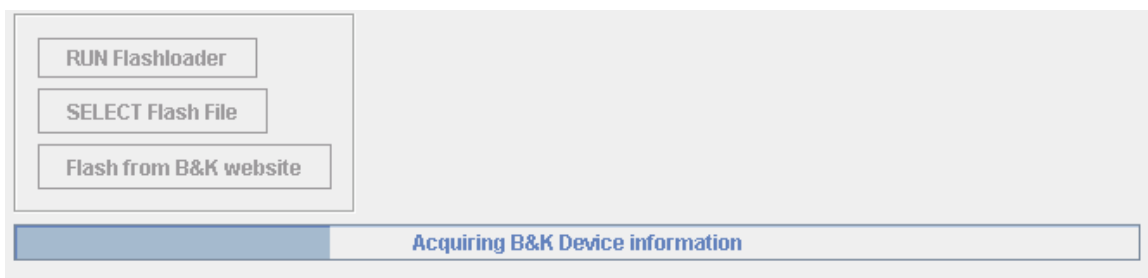


7. After the B&K device query is completed, the application will scan for all available B&K devices on the network. This may take up to 30 seconds.

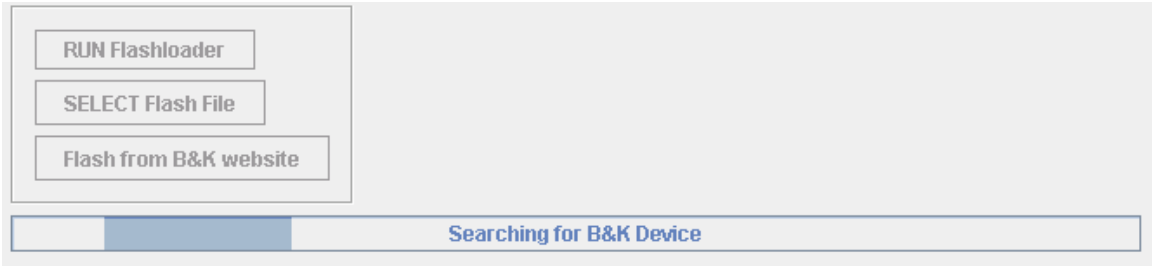

8. After the application identifies the B&K device, click on "Run Flashloader" to connect with the B&K Flashloader firmware in the device.

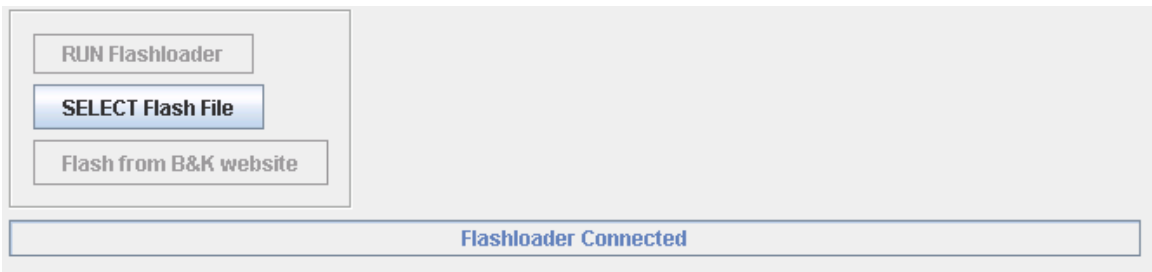

9. After connection to the B&K Flashloader, click on “Select Flash File”. Select the appropriate file to “flash” the B&K firmware. After selecting the file, download will start automatically.

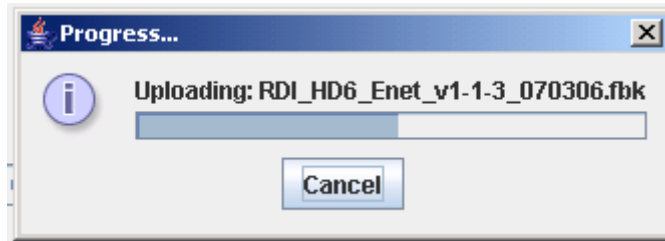

10. At completion of the download, toggle the main power of the B&K device. The application will close after clicking “ok”.

