

B & K CT Series MZ-128 Remote Controller Reference Sheet

The MZ-128 Remote Controller has multiple useful functions:

- 1) The MZ-128 Remote Controller may be used to control and setup a CT610/310/600.
- 2) The MZ-128 may be used as a source of IR for use in programming learning keypads etc...
- 3) The MZ-128 may be set to source the B & K IR functions listed below, for code sets 000-128 and 999.

Setup the MZ-128 to use a discrete B & K code set:

- 1) Install 4 AAA batteries into the remote. Observe polarity.
- 2) Press and hold the B & K and MUTE buttons simultaneously for two seconds. The LED will light up solid red and stay illuminated.
- 3) Firmly press the desired B & K three digit code set. Always use three digits (i.e. 0-1-1 default for Zone A)
- 4) Press the B & K button again to confirm setup. The red LED will blink three times when the IR

MZ-128 Default Factory Code-Set is: 0-0-0 Whole House Control

CODE SET 000-128

MZ-128 BUTTON B & K IR FUNCTION [POWER STATE]

B&K POWER ON
POWER POWER TOGGLE
OFF POWER OFF

[VOLUME]
MUTE MUTE TOGGLE
VOLUME ^ MASTER VOL UP
VOLUME v MASTER VOL DOWN

[TONE CONTROL]
B+ BASS UP
B- BASS DOWN
T+ TREBLE UP
T- TREBLE DOWN
LOUD LOUDNESS TOGGLE

[INPUT SOURCE]
S+ SOURCE UP
S- SOURCE DOWN
V+ VIDEO SOURCE UP
D-IN ZONE DEDICATED IN
AM TUNER AM
FM TUNER FM
IN 1 IN 1 OR [V1]
IN 2 IN 2 OR [V2]
IN 3 IN 3 OR [TV]
IN 4 IN 4 OR [DVD]
IN 5 IN 5 OR [CD]
IN 6 IN 6 OR [SAT]
IN 7 IN 7 OR [TAPE]
IN 8 IN 8 OR [V4]
IN 9 IN 9 OR [V5]

[FAVORITE PRESET]
PRESET ^ FAVORITE PRESET UP
PRESET v FAVORITE PRESET DN

MZ-128 BUTTON B & K IR FUNCTION [TUNER]

AM SELECT THE AM BAND
FM SELECT THE FM BAND
TUNE + TUNE FREQUENCY UP
TUNE - TUNE FREQUENCY DOWN
STA + TUNER FAV PRESET UP
STA- TUNER FAV PRESET DOWN
M STEREO / MONO

[NAVIGATION]
MENU MENU UP/DOWN LEVEL
LEFT LEFT OR BALANCE (L)
RIGHT RIGHT OR BALANCE (R)
SEL/ENTER SELECT OR ENTER
UP UP
DOWN DOWN
SAVE SAVE
EXIT TOTAL EXIT FROM ALL MENUS
ZONE ZONE SELECT

[NUMERIC]

0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	+10

CODE SET 999

MZ-128 BUTTON B & K IR FUNCTION [B & K ALL COMMANDS]

ON/B & K/POWER ALL B & K POWER ON
OFF ALL B & K POWER OFF
VOLUME ^ ALL B & K VOLUME UP
VOLUME v ALL B & K VOLUME DOWN
0 ALL B & K VOLUME 0 DB
2 ALL B & K VOLUME -20 DB
4 ALL B & K VOLUME -40 DB
6 ALL B & K VOLUME -60 DB
MUTE ALL B & K MUTE TOGGLE

Code-Set 128 Simply Explained

Code-Set 128 is a special code-set which allows individual control of the Hardware Zone that the IR Data is received by. It will not function when received by the unit's front panel. I.e., Two keypads are plugged into Zone A & B's Control I/O Ports, when the remote comes into IR view of the keypad in Zone A, the 128 Code-set remote will only control Zone A, when in Zone A. Take that same remote into Zone B and it will only control Zone B.

